

HOW TO DRAW WATER FROM A BUCKET WHEN USING A KÄRCHER PRESSURE CLEANER.

Kärcher recommends using the 'Suction hose with filter' accessory (Sold separately) Part No, 4.440-238.0



Suction Hose with Filter
4.440-238.0



Connect the suction hose to the water inlet on the pressure cleaner and drop the other end into a bucket.

If you are not using this accessory, coil a hose into the bucket and **ensure that you use a hose clamp** to connect to the pressure cleaner

Click fittings must not be used !



Fill up your bucket with water



Connect the Kärcher power cord to an electricity source & turn on at powerpoint. Make sure the high pressure nozzle is not connected & turn the unit on at the on/off switch. Press the trigger on the gun - the unit is ready for use once there is a constant water stream.



Connect the high pressure nozzle & press the hand trigger to begin cleaning.